BookletChartTM






A reduced-scale NOAA nautical chart for small boaters When possible, use the full-size NOAA chart for navigation.



- Complete, reduced-scale nautical chart
- Print at home for free
- Convenient size
- Up-to-date with Notices to Mariners
- Compiled by NOAA's Office of Coast Survey, the nation's chartmaker

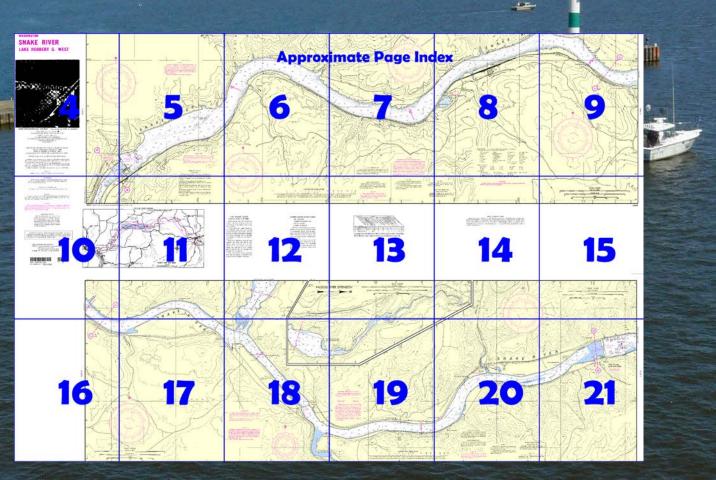

Published by the National Oceanic and Atmospheric Administration National Ocean Service Office of Coast Survey

<u>www.NauticalCharts.NOAA.gov</u> 888-990-NOAA

What are Nautical Charts?

Nautical charts are a fundamental tool of marine navigation. They show water depths, obstructions, buoys, other aids to navigation, and much more. The information is shown in a way that promotes safe and efficient navigation. Chart carriage is mandatory on the commercial ships that carry America's commerce. They are also used on every Navy and Coast Guard ship, fishing and passenger vessels, and are widely carried by recreational boaters.

What is a BookletChart[™]?

This BookletChart is made to help recreational boaters locate themselves on the water. It has been reduced in scale for convenience, but otherwise contains all the information of the full-scale nautical chart. The bar scales have also been reduced, and are accurate when used to measure distances in this BookletChart. See the Note at the bottom of page 5 for the reduction in scale applied to this chart.


Whenever possible, use the official, full scale NOAA nautical chart for navigation. Nautical chart sales agents are listed on the Internet at http://www.NauticalCharts.NOAA.gov.

This BookletChart does NOT fulfill chart carriage requirements for regulated commercial vessels under Titles 33 and 44 of the Code of Federal Regulations.

Notice to Mariners Correction Status

This BookletChart has been updated for chart corrections published in the U.S. Coast Guard Local Notice to Mariners, the National Geospatial Intelligence Agency Weekly Notice to Mariners, and, where applicable, the Canadian Coast Guard Notice to Mariners. Additional chart corrections have been made by NOAA in advance of their publication in a Notice to Mariners. The last Notices to Mariners applied to this chart are listed in the Note at the bottom of page 7. Coast Pilot excerpts are not being corrected.

For latest Coast Pilot excerpt visit the Office of Coast Survey website at http://www.nauticalcharts.noaa.gov/nsd/searchbychart.php?chart=185 46.

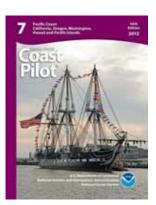

(Selected Excerpts from Coast Pilot)
Snake River, 283 (325.2) miles above the mouth of Columbia River, rises in
Yellowstone National Park, from which it winds S past the Grand Tetons, and thence for 868 miles to its junction with the Columbia at Pasco, WA.
From that junction for 119 (137) miles to Lewiston, ID there are few small-craft facilities. (See small-craft facilities tabulation on charts 18545, 18546, 18547, and 18548 for supplies and services available.) There are several

marinas along the river at **Clarkston**, WA and **Lewiston**, ID where berths, gasoline, diesel fuel, water, ice, and marine supplies may be obtained.

The Ports of Clarkston and Lewiston at the confluence of the Snake and Clarkford Rivers are the primary ports along the Snake River and serve the inland agricultural and logging communities of Washington, Idaho, and Oregon. Barge loading facilities and grain terminals are available at both ports.

Near its mouth, at the village of **Burbank**, Snake River is crossed by the Burlington Northern Railroad lift bridge with a clearance of 14 feet down and 60 feet up. The bridgetender monitors VHF-FM channel 16 and works on channel 13; call sign KQ- 9047. About 0.6 (0.7) mile above the railroad bridge, there are dual spans of a fixed highway bridge with a least clearance of 61 feet. Numerous overhead cables with a reported minimum clearance of 43 feet cross Snake River between the fixed highway bridge and Ice Harbor Lock and Dam.

East Pasco, on the N side of Snake River 1 mile above the mouth, has privately owned facilities for receipt and shipment of petroleum products and liquid fertilizer. Burbank, on the S side of the river has two grain facilities owned by the Port of Walla Walla and operated by private companies. From East Pasco to Lewiston there are several facilities used for shipment of grain and wood chips. Other facilities along the river specialize in the receipt and shipment of logs, general cargo, petroleum products, anhydrous ammonia, and liquid fertilizer.

Ice Harbor Lock and Dam, 8.4 (9.7) miles above the mouth of the Snake River, has a single lift lock with a vertical lift of about 100 feet. A restricted area is above and below the dam; the area is marked by buoys above the dam. (See 207.718, chapter 2, for information concerning use, administration, and navigation of Ice Harbor Lock and Dam.) Lake Sacajawea, the lake formed by the waters behind Ice Harbor Dam, provides depths at slack water of 10 feet or more for a distance of 27.8 (32) miles to Lower Monumental Dam.

Lower Monumental Lock and Dam, 27.6 (31.8) miles above Ice Harbor Dam and about 36 (41.5) miles above the mouth of the Snake River, has a single lift lock with a vertical lift of about 100 feet. A restricted area is above and below the dam; the area is marked by buoys above the dam. (See 207.718, chapter 2, for information concerning use, administration, and navigation of Lower Monumental Lock and Dam.)

The Snake River between Lower Monumental Dam and Little Goose Dam, 25 (28.8) miles above Lower Monumental Dam, is crossed by three fixed bridges with a least clearance of 52 feet; overhead power cables crossing the river between the two dams have a clearance of 90 feet.

Little Goose Lock and Dam, about 25 (28.8) miles above Lower Monumental Dam and about 61.1 (70.3) miles above the mouth of the Snake River, has a single lift lock with a vertical lift of about 98 feet. A restricted area is above and below the dam; the area is marked by buoys above the dam. (See 207.718, chptr 2, for information concerning use, administration, and navigation of Little Goose Lock and Dam.)

Lake Bryan, the pool formed by Little Goose Dam is crossed by a fixed highway bridge with a clearance of 60 feet about 10.7 (12.3) miles above the dam; overhead power cables with a least clearance of 75 feet cross the lake between Little Goose Dam and Lower Granite Dam.

Lower Granite Lock and Dam, about 31.5 (36.8) miles above Little Goose Dam and about 93.4 (107.5) miles above the mouth of the Snake River, has a single lift navigation lock 675 feet long and 86 feet wide. The dam, completed in 1975, permits navigation to Lewiston, Idaho, 120 (138) miles above the mouth of the Snake River. A restricted area is above and below the dam; the area is marked by buoys above the dam. (

U.S. Coast Guard Rescue Coordination Center 24 hour Regional Contact for Emergencies

RCC Seattle

Commander 13th CG District

Seattle, WA

(206) 220-7001

2

CAUTION

Temporary changes or defects in aids to navigation are not indicated on this chart. See Local Notice to Mariners.

All craft should avoid areas where the skin divers flag, a red square with a diagonal white stripe, is displayed.

All craft should avoid areas where the skin divers flag, a red square with a diagonal white stripe, is displayed.

CAUTION

Small craft should stay clear of large com-mercial and government vessels even if small craft have the right-of-way.

CAUTION

Small craft should stay clear of large com-mercial and government vessels even if small craft have the right-of-way.

HORIZONTAL DATUM

The horizontal reference datum of this chart is North American Datum of 1983 (NAD 83), which for charting purposes is considered equivalent to the World Geodetic System 1984 (WGS 84). Geographic positions referred to the North American Datum of 1927 must be corrected an average of 0.482" southward and 3.894" westward to agree with this chart.

SUBMARINE PIPELINES AND CABLES

Charted submarine pipelines and submarine bables and submarine pipeline and cable areas are shown as:

Pipeline Area Additional uncharted submarine pipelines and

submarine cables may exist within the area of this chart. Not all submarine pipelines and submarine cables are required to be buried, and those that were originally buried may have become exposed. Mariners should use extreme caution when operating vessels in depths of water comparable to their draft in areas where pipelines and cables may exist, and when nchoring, dragging, or trawling.

Covered wells may be marked by lighted or

CAUTION

Temporary changes or defects in aids to navigation are not indicated on this chart. See Local Notice to Mariners.

BADAR REFLECTORS

Radar reflectors have been placed on many floating aids to navigation. Individual radar reflector identification on these aids has been omitted from this chart.

BADAR REFLECTORS

Radar reflectors have been placed on many floating aids to navigation. Individual radar reflector identification on these aids has been omitted from this chart.

LOWER SNAKE RIVER DAMS ICE HARBOR LOWER MONUMENTAL LITTLE GOOSE

LOWER GRANITE

These four Snake River Dams were authorized by Congress to serve the Pacific Northwest as "Multipurpose" projects, providing electric power, slack-water transportation to the Pacific Ocean Ports, and to retain passage for anadromous fish to and from their habitual spawning waters inland.

Many parks and recreation areas are also planned by the Corps of Engineers for the enjoyment of the entire family. Northwest residents and their guests will have ready access to swimming, boating, fishing, skiing and picnicking.

POLLUTION REPORTS

Report all spills of oil and hazardous substances to the National Response Center via 1-800-424-8802 (toll free), or to the nearest U.S. Coast Guard facility if telephone communication is impossible (33 CFR 153).

Table of Selected Chart Notes

The prudent mariner will not rely solely on any single aid to navigation, particularly on floating aids. See U.S. Coast Guard Light List and U.S. Coast Pilot for details.

WARNING

The prudent mariner will not rely solely on any single aid to navigation, particularly on floating aids. See U.S. Coast Guard Light List and U.S. Coast Pilot for details.

SNAKE RIVER

Mileage distances along the Snake River are in Statute Distances along the Snake River are from the unction of the Columbia River and are indicated

Tables for converting Statute Miles to Internationa Nautical miles are given in Coast Pilot 7.

SNAKE RIVER

Mileage distances along the Snake River are in Statute Miles. Distances along the Snake River are from the unction of the Columbia River and are indicated

Tables for converting Statute Miles to International Nautical miles are given in Coast Pilot 7.

Navigation regulations are published in Chapter 2, U.S. Coast Pilot 7. Additions or revisions to Chapter 2 are pub-shed in the Notice to Mariners. Information concerning thi agulations may be obtained at the Office of the Commander 3th Coast Guard District in Seattle, Washington or at the ffice of the District Engineer, Corps of Engineers in pattle, Washington.

Refer to charted regulation section numbers

Navigation regulations are published in Chapter 2, U.S coast Pilot 7. Additions or revisions to Chapter 2 are pub ished in the Notices to Mariners, Information concerning the regulations may be obtained at the Office of the Corr mander, 13th Coast Guard District in Seattle, Washington, at the Office of the District Engineer, Corps of Engineers Walla Walla, Washington

Refer to charted regulation section numbers

POLLUTION REPORTS

Report all spills of oil and hazardous substances to the National Response Center via 1-800-424-8802 (toll free), or to the nearest U.S. Coast Guard facility if telephone communication is impossible (33 CFR 153).

RULES OF THE ROAD (ABRIDGED)

Motorless craft have the right-of-way in almost all cases Sailing vessels and motorboats less than sixty-five feet in length shall not hamper, in a narrow channel, the safe passage of a vessel which can navigate only inside that channel.

A motorboat being overtaken has the right-of-way.

Motorboats approaching head to head or nearly so should pass port to port. When motorboats approach each other at right angles or obliquely, the boat on the right has the right-of-way in most

Motorboats must keep to the right in narrow channels when safe and practicable.

Mariners are urged to become familiar with the complete text

of the Rules of the Road in U.S. Coast Guard publication "Navigation Rules."

CAUTION

WARNINGS CONCERNING LARGE VESSELS

Wanning Concerning Lands vessels

The 'Rules of the Road' state that recreational boats shall not impede the passage of a vessel that can navigate only within a narrow channel or fairway. Large vessels may appear to move slowly due to their large size but actually transit at speeds in excess of 12 knots, requiring a great distance in which to maneuver or stop. A large vessel's superstructure may block the wind with the result that sailboats and sailboards may unexpectedly find themselves unable to maneuver. Bow and stem waves can be hazardous to small vessels. Large vessels may not be able to see smal

HEIGHTS

Heights are in feet. Contour elevations refer to mean sea level.

AUTHORITIES

Hydrography and topography by the National Ocean Service, Coast Survey, with additional data from the Corps of Engineers, Geological Survey, and U.S. Coast Guard.

who guided the explorers

difficult (Canoes became) and joins the Colun after flowing 1,038 from elevations of of 300 feet. Discovered in 18 expedition, the St turbulent rapids p Today, neu
Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today, neu

Today,

covered in 1805 by the Lewis or tition, the Snake River with it and tapids presented one of the trivers for the Expedition to rule trivers for the Expedition to rule to the saturated and some supplifuen a canne capsized.

and a canne capsized. is dedicated

Lewis and Clark
with its many
ne of the most
ion to negotiate.
rocks, supplies
e supplies were

The river rises in high, rugged mountains of the continental divide near the southwest corner of Yellowstone National Park in Wyoming and joins the Columbia near Pasco, Washington after flowing 1,038 miles. The river descends from elevations of 10,000 feet to an elevation THE SNAKE RIVER
FACTS AND HISTORY
The Snake River, one of the most important streams in the Pacific northwest section of the United States, is the largest tributary of the

MERCATOR PROJECTION SCALE 1:20,000 AT 46°35' NORTH AMERICAN DATUM OF 1983 (WORLD GEODETIC SYSTEM 1984) SOUNDINGS AND OVERHEAD CLEARANCES IN FEET

FACILITIES

Locations of public marine facilities are shown by large magenta numbers wit leaders and refer to the facility tabulation

CAUTION


The depths of water on this chart have been determined from conditions existing prior to the filling of the pool. Shoaler depths than charted may exist within the blue tinted areas particularly near the shoreline.

Soundings and vertical clearances are referred to the respective pool elevations above mean sea level which are 440 feet west of Lower Monumental Dam, 540 feet in Lake Herbert G. West and 635 feet east of Little Goose Dam.


The water level in the upper pool above Lower Monumental Dam may fluctuate without warning between 537 feet MSL (pool low water elevation) and the 540 feet MSL (normal pool) sounding datum.


Mariners are advised to use caution due to possible change in water level.


ABBREVIATIONS (For or Aids to Navigation (lights an			ons, see Chart No. 1.)	
AERO aeronautical G gre Al alternating IQ into B black Iso iso		pted quick ase	Mo morse code N nun OBSC obscured	R TR radio tower Rot rotating s seconds
Bn beacon C can	M nautical mile		Oc occulting Or orange	SEC sector St M statute miles
DIA diaphone F fixed FI flashing	m minutes MICRO TR microwave tower Mkr marker		Q quick R red Ra Ref radar reflector	VQ very quick W white WHIS whistle
Bottom characteristics:			R Bn radiobeacon	Y yellow
Blds boulders bk broken Cy clay	Co coral G gravel Grs grass	gy gray h hard M mud	Oys oysters Rk rock S sand	so soft Sh shells sy sticky
Miscellaneous: AUTH authorized		obstruction	PD position doubtful	Subm submerged
0000		ition approximate	Rep reported	Subm submerged
(2) Rocks that cover	and uncover, v	vith heights in feet a	bove datum of soundings	

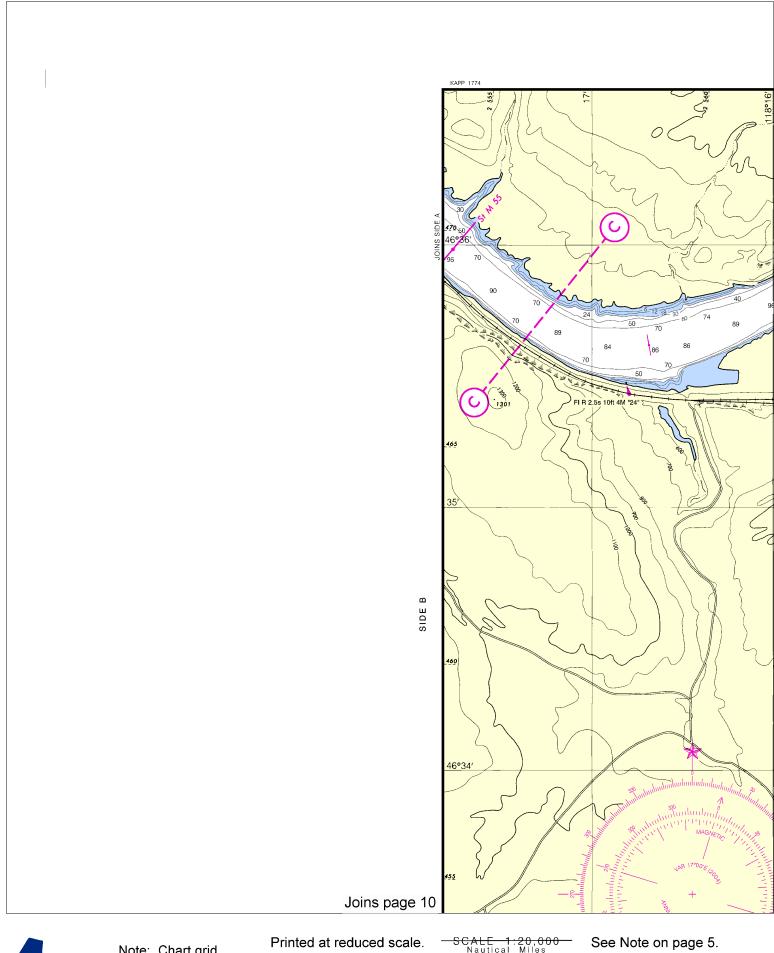


4

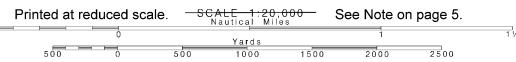


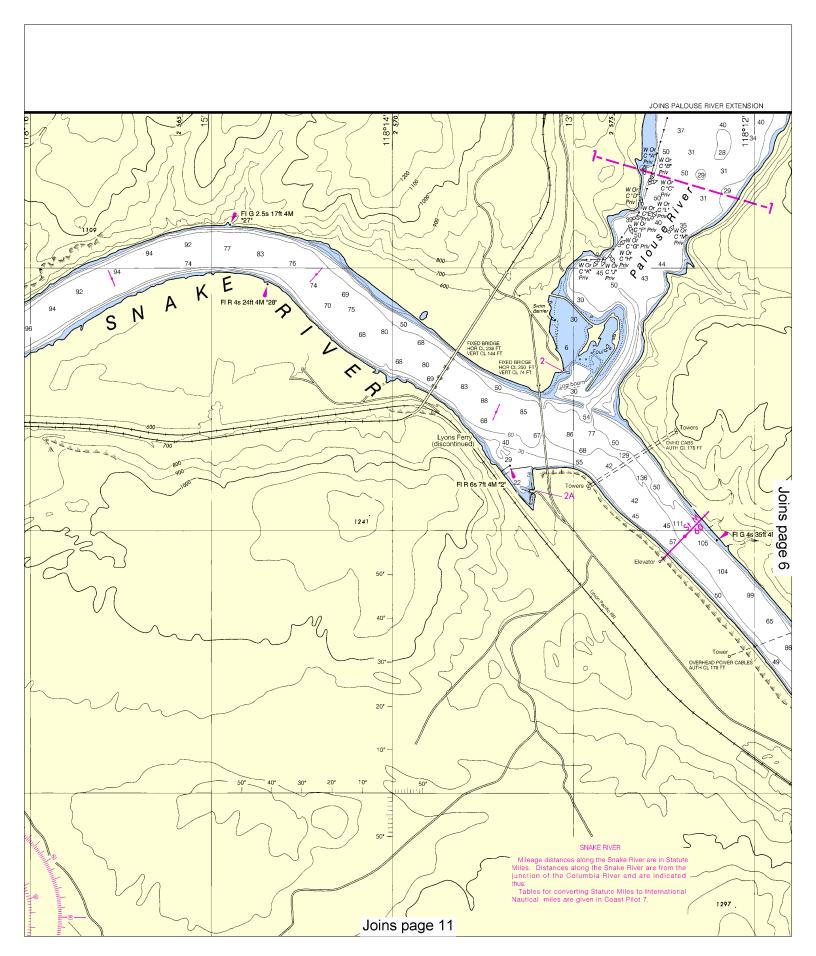


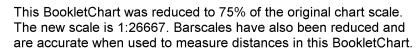



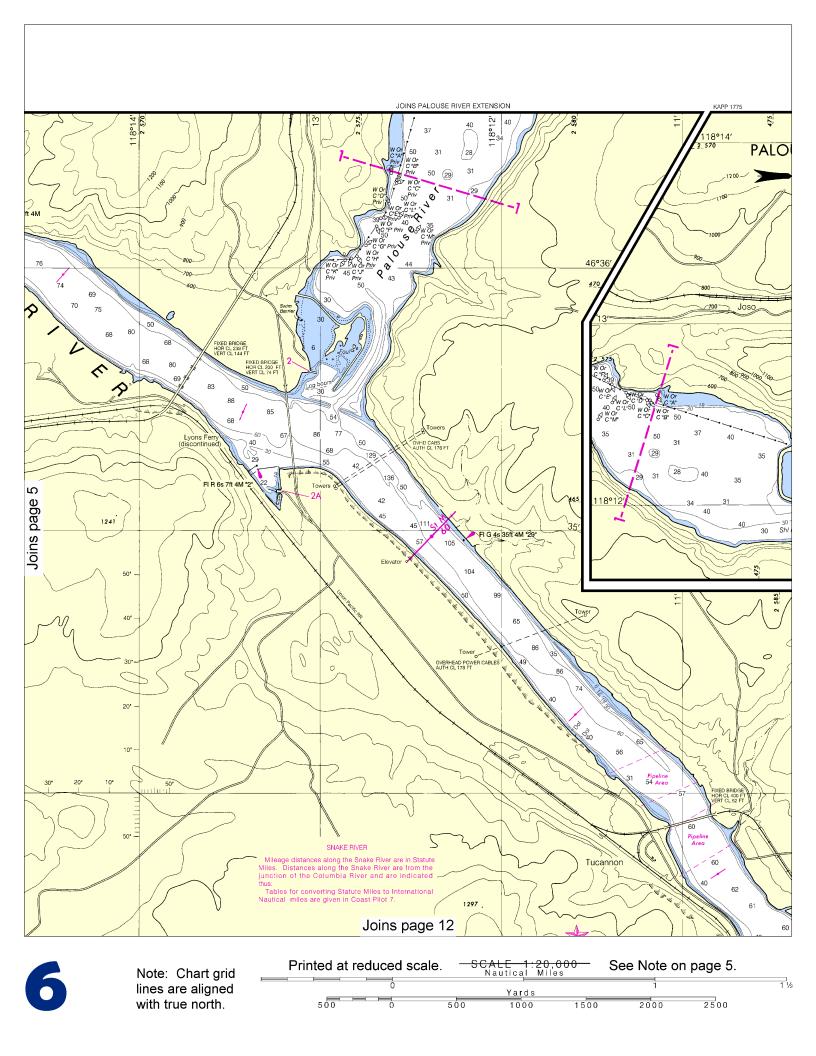


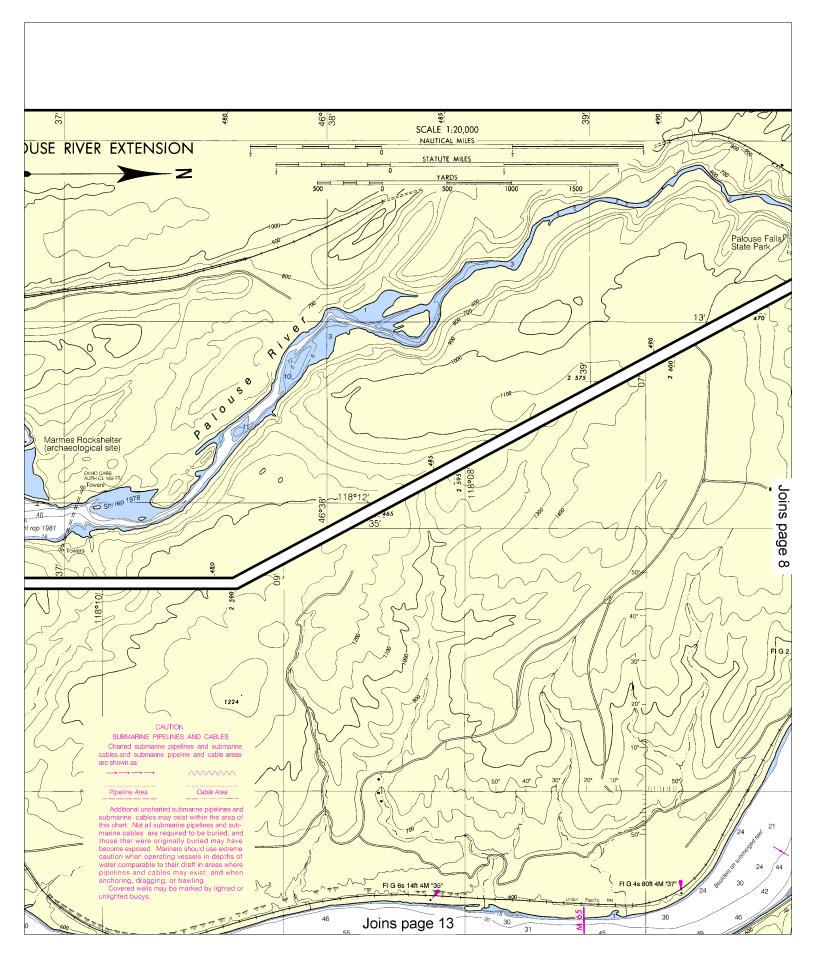


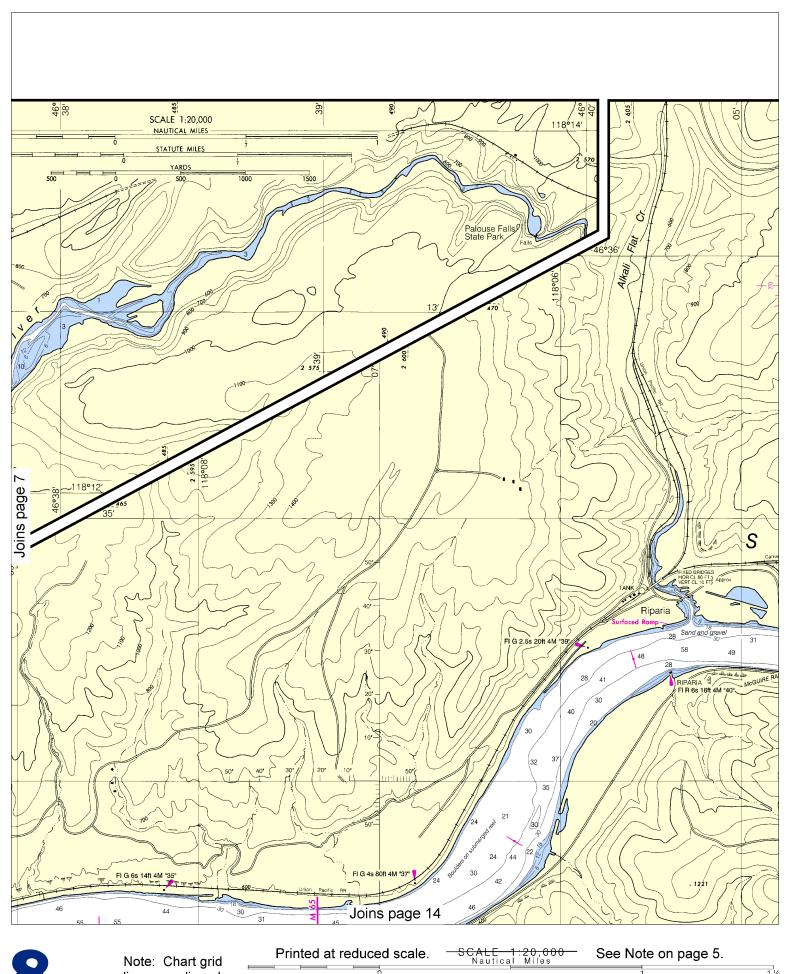




lines are aligned with true north.

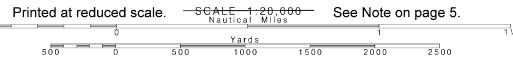

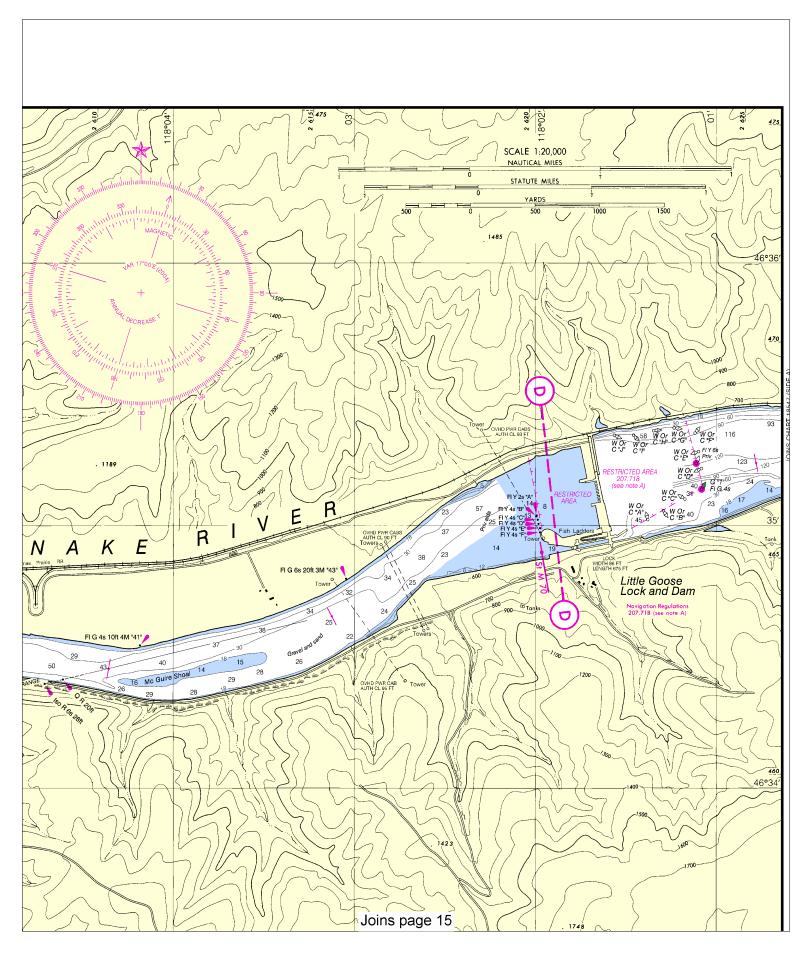



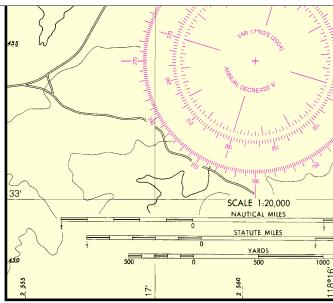


18546 10th Ed., Feb. /04; Corrected through NM Feb. 14/04, LNM Jan. 27/04



NAUTICAL CHART 18546


SNAKE RIVER LAKE HERBERT G. WEST




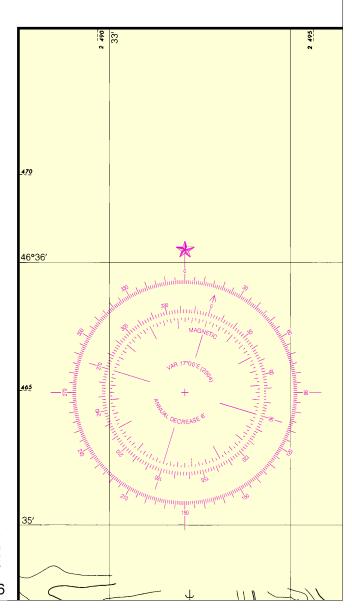


10




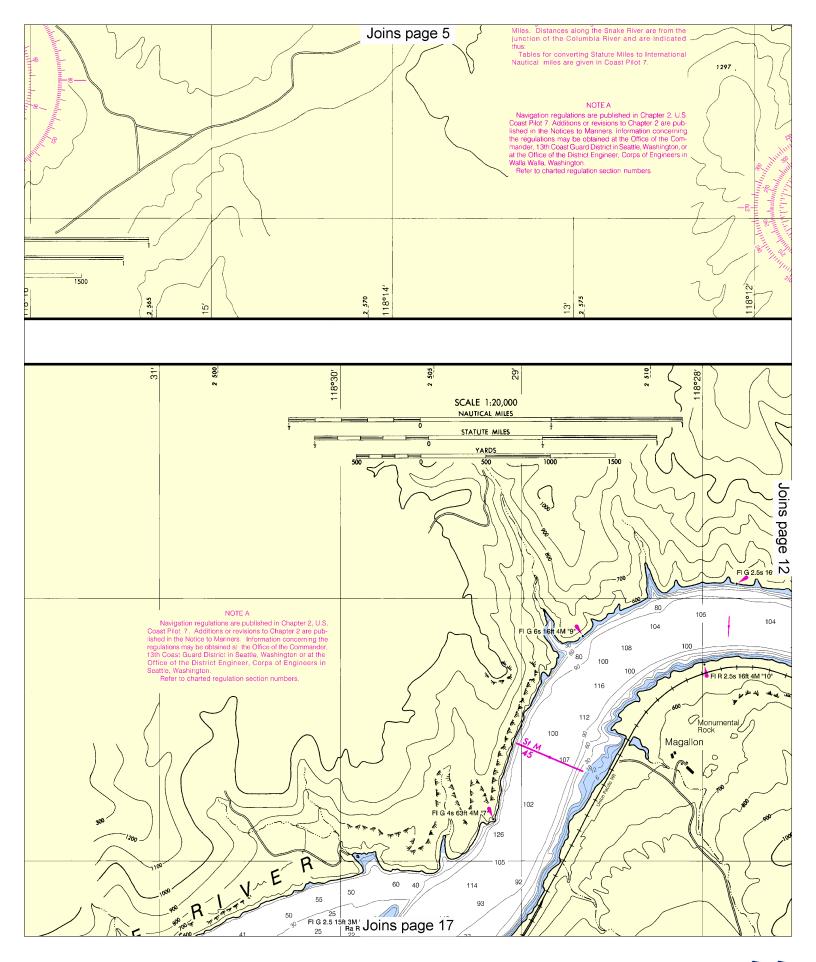


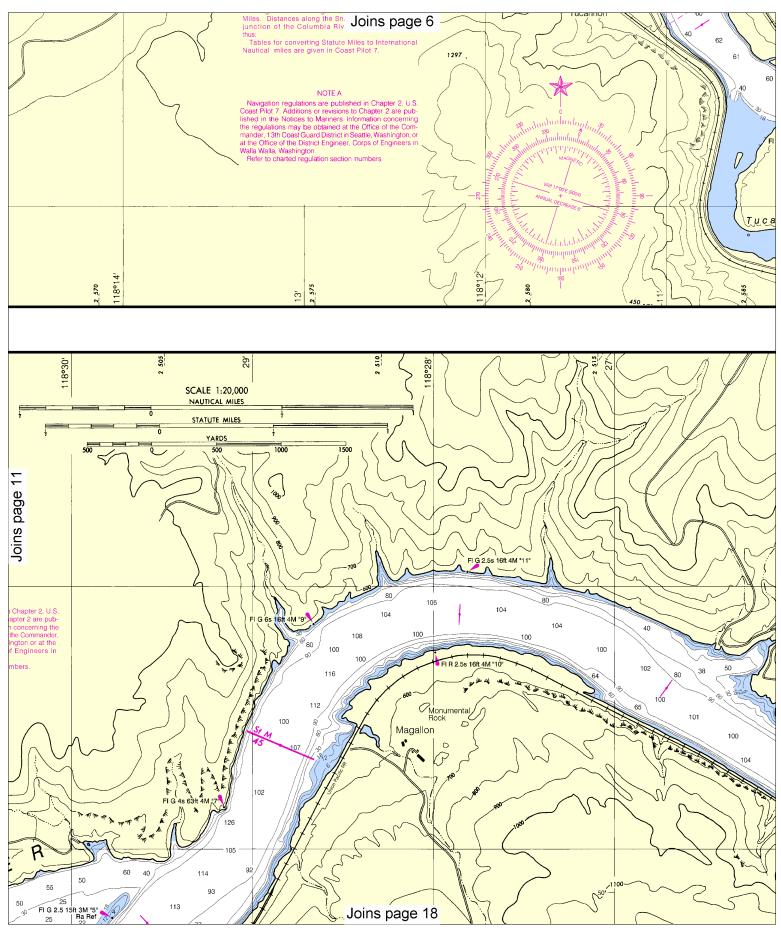

12

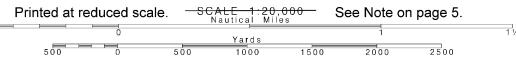

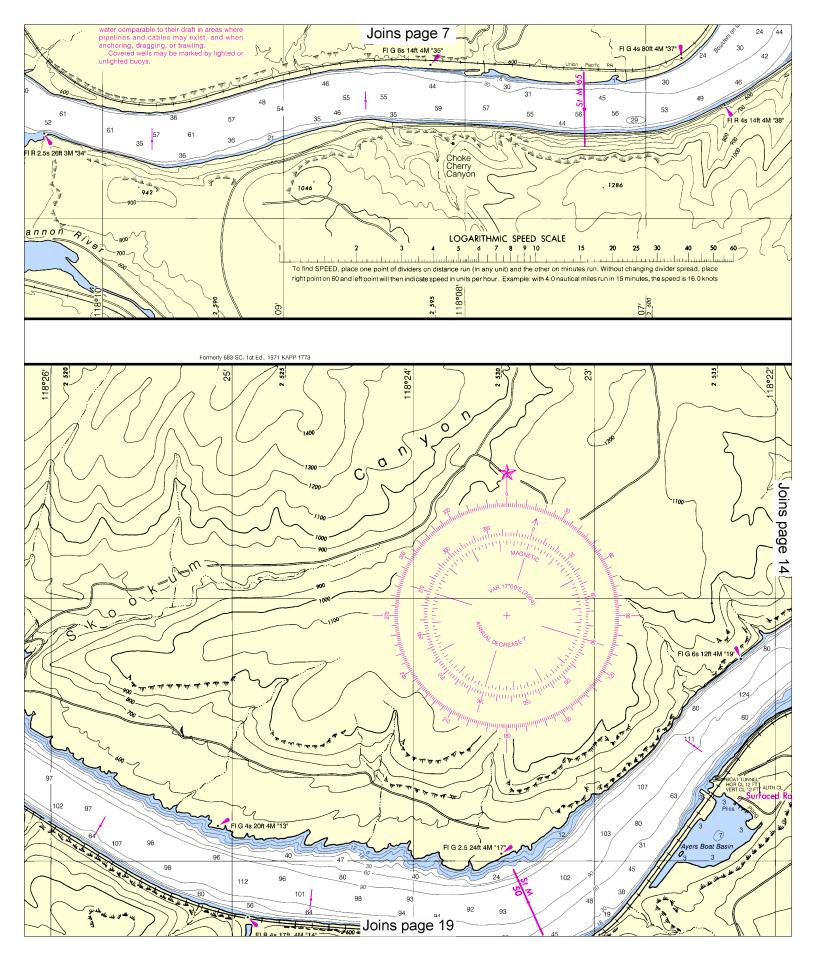

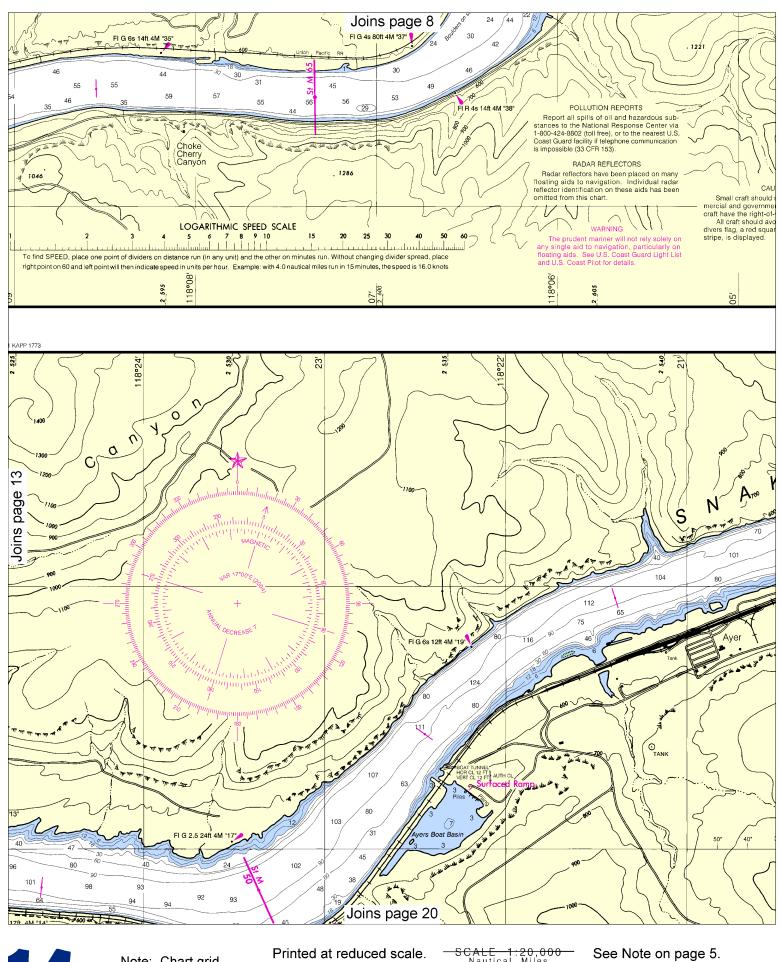

14



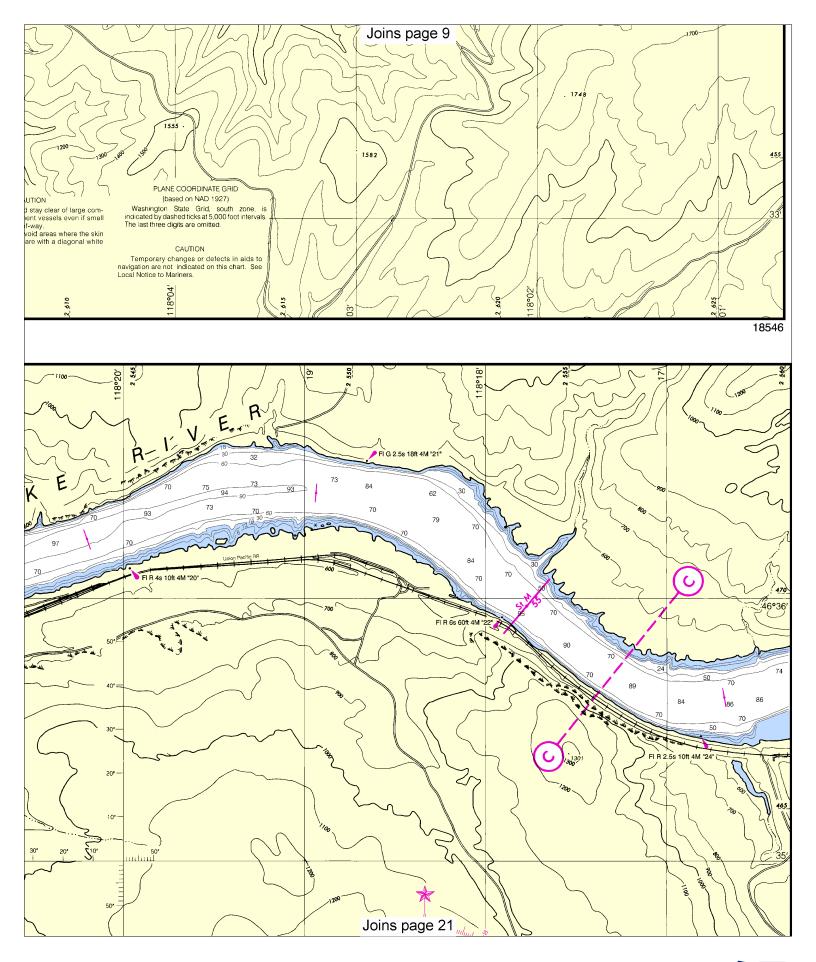




Photo Courtesy U.S. CORPS OF ENGINEERS Lower Monumental Lock and Dam

> Chart 18546, 10th Ed., Feb. /04 Corrected through NM Feb. 14/04, LNM Jan. 27/04

Published at Washington, D.C. U.S. DEPARTMENT OF COMMERCE NATIONAL OCEANIC AND ATMOSPHERIC ADMINISTRATION
NATIONAL OCEAN SERVICE
COAST SURVEY

MERCATOR PROJECTION SCALE 1:20,000 AT 46°35' NORTH AMERICAN DATUM OF 1983 (WORLD GEODETIC SYSTEM 1984) SOUNDINGS AND OVERHEAD CLEARANCES IN FEET

Additional information can be obtained at nauticalcharts.noaa.gov.

Soundings and vertical clearances are referred to the respective pool elevations above mean sea level which are 440 feet west of Lower Monumental Dam, 540 feet in Lake Herbert G. West and 635 feet east of Little Goose Dam.

The water level in the upper pool above Lower Monumental Dam may fluctuate without warning between 537 feet MSL. (pool low water elevation) and the 540 feet MSL (normal pool) sounding datum.

Mariners are advised to use caution due to possible change in water level.

Heights are in feet. Contour elevations refer to mean sea level.

AUTHORITIES

Hydrography and topography by the National Ocean Service, Coast Survey, with additional data from the Corps of Engineers, Geological Survey, and U.S. Coast Guard.

SUPPLEMENTAL INFORMATION

Consult U.S. Coast Pilot 7 for important supplemental information.

CAUTION

The depths of water on this chart have been determined from conditions existing prior to the filling of the pool. Shoaler depths than charted may exist within the blue tinted areas particularly near the shoreline.

CAUTION

This chart has been corrected from the Notice to Mariners (NM) published weekly by the National Geospatial-Intelligence Agency and the Local Notice to Mariners (LNM) issued periodically by each U.S. Coast Guard district to the dates shown in the lower left hand corner.

HORIZONTAL DATUM

The horizontal reference datum of this chart is North American Datum of 1983 (NAD 83), which for charting purposes is considered equivalent to the World Geodetic System 1984 (WGS 84). Geographic positions referred to the North American Datum of 1927 must be corrected an average of 0.482" southward and 3.894" westward to agree with this chart.


This nautical chart has been designed to promote safe navigation. The National Ocean Service encourages users to submit corrections, additions, or comments for improving this chart to the Chief, Marine Chart Division (N/CS2), National Ocean Service, NOAA, Silver Spring, Maryland 20910-3282.

FOR DISTRIBUTION SERVICE


WRITE: FAA/NACO Distribution Division (AVN-530) 6303 lvy Lane, Suite 400 Greenbelt, Maryland 20770-6325 PHONE: 301-436-8301 or 1-800-638-8972


NSN 7642014011624 NGA REFERENCE NO. 18XHA18546




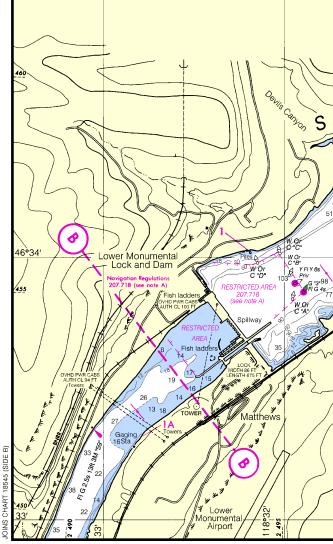


18546 10th Ed., Feb. /04; Corrected through NM Feb. 14/04, LNM Jan. 27/04

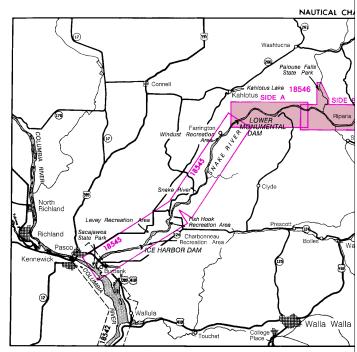

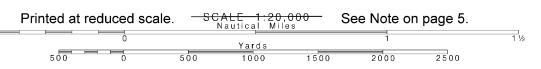

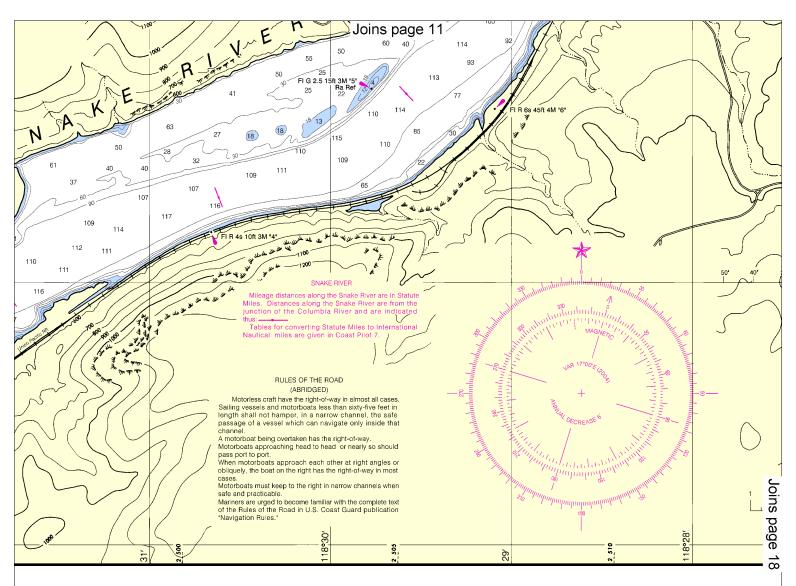

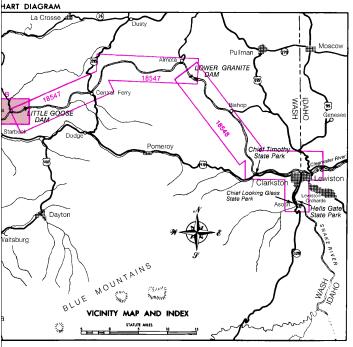


THE SNAKE RIVER FACTS AND HISTORY

The Snake River, one of the most important streams in the Pacific northwest section of the United States, is the largest tributary of the Columbia River.

The river rises in high, rugged mountains of the continental divide near the southwest corner of Yellowstone Notional Park in Wyoming and joins the Columbia near Pasco, Washington after flowing 1,038 miles. The river descends from elevations of 10,000 feet to an elevation of 300 feet.

Discovered in 1805 by the Lewis and Clark expedition, the Snake River with its many turbulent rapids presented one of the most difficult rivers for the Expedition to negatiate. Canoes were damaged by rocks, supplies became saturated and some supplies were lost when a canoe capsized.

Today, near Pasco-Kennewick, Sacajawea State Park and museum is dedicated to the Indian woman who guided the explorers.

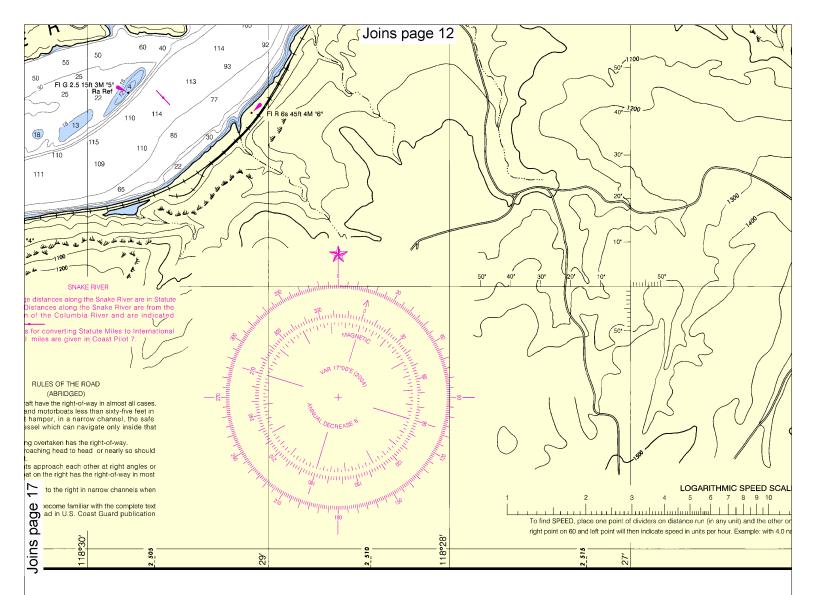



THE SNAKE RIVER FACTS AND HISTORY

The Snake River, one of the most important streams in the Pacific northwest section of the United States, is the largest tributary of the Columbia River.

The river rises in high, rugged mountains of the continental divide near the southwest corner of Yellowstone National Pork in Wyoming and joins the Columbia near Pasco, Washington after flowing 1,038 miles. The river descends from elevations of 10,000 feet to an elevation of 300 feet.

Discovered in 1805 by the Lewis and Clark expedition, the Snake River with its many turbulent rapids presented one of the most difficult rivers for the Expedition to negotiate. Canoes were damaged by rocks, supplies became saturated and some supplies were lost when a canoe capsized.


Today, near Pasco-Kennewick, Sacajawea State Park and museum is dedicated to the Indian woman who guided the explorers.


LOWER SNAKE RIVER DAMS


ICE HARBOR LOWER MONUMENTAL LITTLE GOOSE LOWER GRANITE

These four Snake River Dams were authorized by Congress to serve the Pacific Northwest as "Multipurpose" projects, providing electric power, slack-water transportation to the Pacific Ocean Ports, and to retain passage for anadromous fish to and from their habitual spawning waters inland.


Many parks and recreation areas are also planned by the Corps of Engineers for the enjoyment of the entire family. Northwest residents and their guests will have ready access to swimming, boating, fishing, skiing and picnicking.

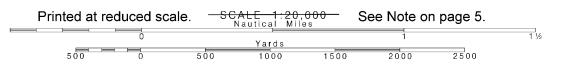

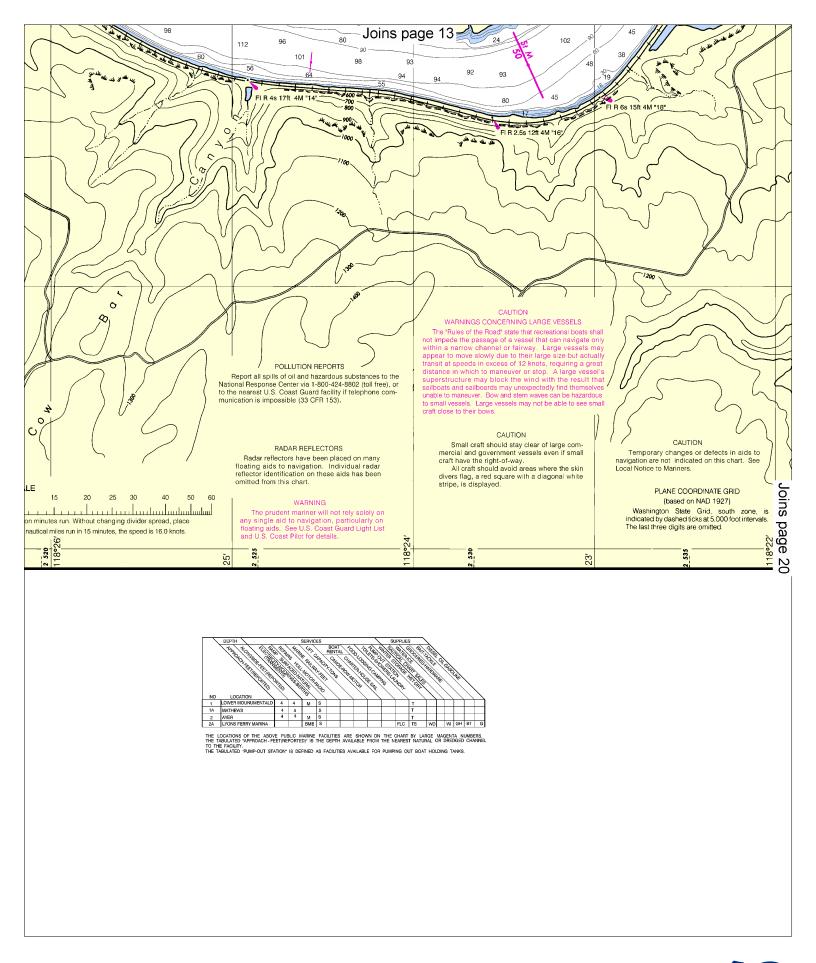

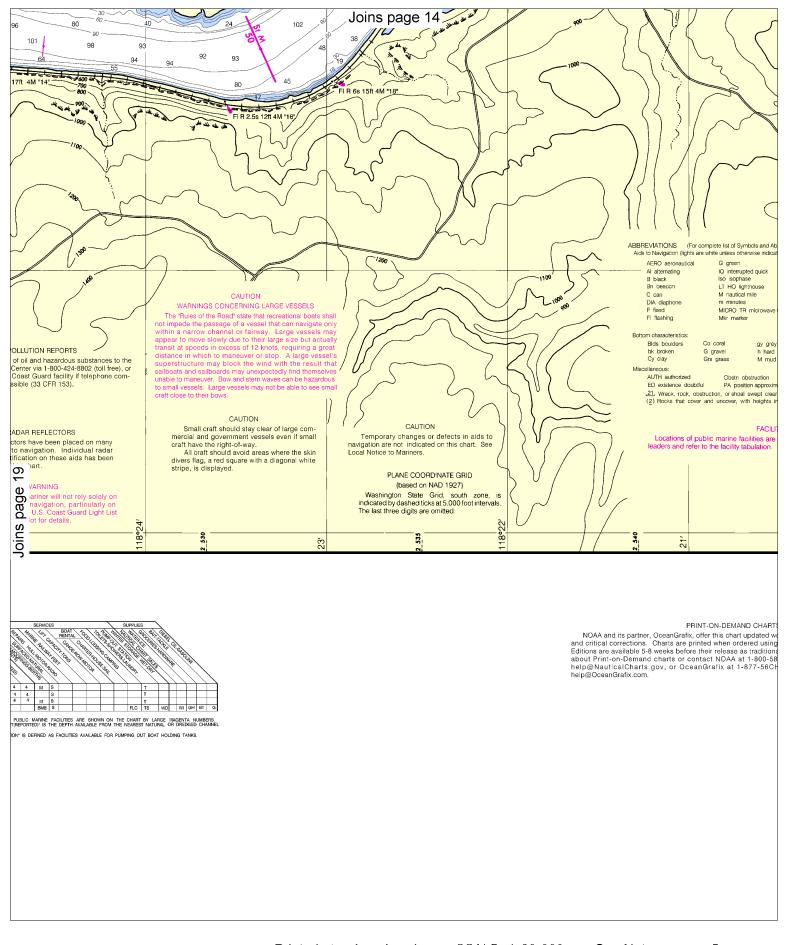

CALE 1:20,000 Nautical Miles Printed at reduced scale. SCALE See Note on page 5. Yards 500 with true north. 500 1500 2000 2500 1000

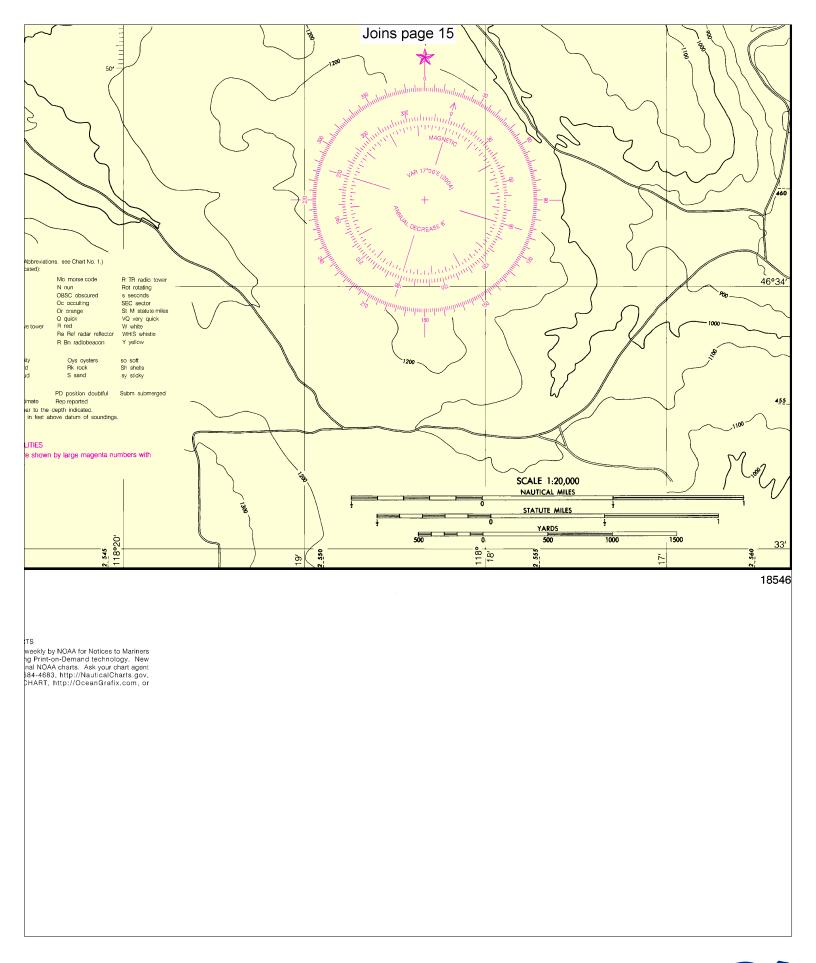



VHF Marine Radio channels for use on the waterways:

Channel 6 – Inter-ship safety communications.

Channel 9 – Communications between boats and ship-to-coast.

Channel 13 – Navigation purposes at bridges, locks, and harbors.

Channel 16 – Emergency, distress and safety calls to Coast Guard and others, and to initiate calls to other

vessels. Contact the other vessel, agree to another channel, and then switch.

Channel 22A – Calls between the Coast Guard and the public. Severe weather warnings, hazards to navigation and safety warnings are broadcast here. Channels 68, 69, 71, 72 and 78A – Recreational boat channels.

Getting and Giving Help — Signal other boaters using visual distress signals (flares, orange flag, lights, arm signals); whistles; horns; and on your VHF radio. You are required by law to help boaters in trouble. Respond to distress signals, but do not endanger yourself.

Distress Call Procedures

- Make sure radio is on.
- Select Channel 16.
- Press/Hold the transmit button.
- Clearly say: "MAYDAY, MAYDAY, MAYDAY."
- Also give: Vessel Name and/or Description; Position and/or Location; Nature of

Emergency; Number of People on Board.

- · Release transmit button.
- Wait for 10 seconds If no response Repeat MAYDAY call.

HAVE ALL PERSONS PUT ON LIFE JACKETS!



NOAA Weather Radio All Hazards (NWR) is a nationwide network of radio stations broadcasting continuous weather information directly from the nearest National Weather Service office. NWR broadcasts official Weather Service warnings, watches, forecasts and other hazard information 24 hours a day, 7 days a week.

http://www.nws.noaa.gov/nwr/

Quick References

Nautical chart related products and information — http://www.nauticalcharts.noaa.gov

Online chart viewer — http://www.nauticalcharts.noaa.gov/mcd/NOAAChartViewer.html

Report a chart discrepancy — http://ocsdata.ncd.noaa.gov/idrs/discrepancy.aspx

Chart and chart related inquiries and comments — http://ocsdata.ncd.noaa.gov/idrs/inquiry.aspx?frompage=ContactUs

Chart updates (LNM and NM corrections) — http://www.nauticalcharts.noaa.gov/mcd/updates/LNM_NM.html

Coast Pilot online — http://www.nauticalcharts.noaa.gov/nsd/cpdownload.htm

Tides and Currents — http://tidesandcurrents.noaa.gov

Marine Forecasts — http://www.nws.noaa.gov/om/marine/home.htm

National Data Buoy Center — http://www.ndbc.noaa.gov/

NowCoast web portal for coastal conditions — http://www.nowcoast.noaa.gov/

National Weather Service — http://www.weather.gov/

National Hurrican Center — http://www.nhc.noaa.gov/

Pacific Tsunami Warning Center — http://ptwc.weather.gov/

Contact Us — http://www.nauticalcharts.noaa.gov/staff/contact.htm



For the latest news from Coast Survey, follow @nauticalcharts



This Booklet chart has been designed for duplex printing (printed on front and back of one sheet). If a duplex option is not available on your printer, you may print each sheet and arrange them back-to-back to allow for the proper layout when viewing.

